

Digital Photo Frame

User Guide

Copyright Information

All rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form by any means, optical, electronic, recording, or otherwise, without the written permission of our company.

We reserve the right to revise this manual and to make changes to any or all parts at any time, without obligation to notify any person or entity of such revisions and changes.

Table of contents

- Specifications..... 3
- System Requirements..... 4
- USB Device Unplugging Notice 4
- Getting to Know Your Digital Photo Frame... 5
- Remote Control..... 6
- Playback Mode(Viewing JPEG/AVI Files) ... 7
 - Turning on the Digital Photo Frame.....7
 - Viewing Images.....8
 - ◆ Slideshow.....8
 - ◆ Photo Rotation & Display Ratio.....8
 - Playing Video Clips.....9
- Time Mode..... 9
- MP3 Mode 10
- Setup Mode 10
- Card Reader 12

Specifications

Display:	10.2”TFT LCD Supports 16:9 and 4:3 displays
On-screen Display	English, French, Spanish
Language:	German, Italian, Dutch
File formats supported:	JPEG (up to 26 Mega Pixels), Pure Motion JPEG (AVI), MP3
Expansion Slot:	SD/MMC/MS/xD Card slot
Speaker:	Built-in Speaker and Phone Jack
Audio Format:	MP3
Internal Memory:	Nand Flash(Optional)
Interface:	USB2.0 High speed
Infrared:	IR Remote Control
Other Functions:	Slide show with various transition effects, Photo rotation, Alarm Clock & Calendar, USB 2.0 Host/ Device (Mass Storage Device)
Standard Accessories:	USB Cable Adapter (100V-240V) Instruction Manual, Stand Remote control
Dimension:	258*177*26mm (W x H x D) (external frame not included)
Weight:	685± 5g (external frame not included)
Power Source:	Input AC 100V-240V Output DC 9V, 2A

Minimum System Requirements:


Pentium 166 MHz processor or higher
Microsoft Windows 2000/XP/Vista
Available USB port
Super VGA video card and color monitor
CD-ROM or DVD-ROM drive
64 MB RAM
200MB available HD space

Mass Storage Operating System: Windows 2000, XP,Vista

USB Device Unplugging Notice:

To unplug the Digital Photo Frame from the computer, be sure to stop the device beforehand. To stop the Digital Photo Frame, please follow the steps below:




Removing the Digital Photo Frame from a PC: (For Windows 2000/XP/Vista)

1. Click on the “  ” device icon located on the taskbar. Select the device you want to stop (e.g. Stop USB Mass Storage Device Drive (E:)).
2. Follow on-screen instructions to safely remove the Digital Photo Frame.


Notice:

1. The Digital Photo Frame with a SD card acts exactly like a card reader (mass storage device) by connecting the Digital Photo Frame to a computer via USB. (See “Card Reader” section.)

Getting to Know Your Digital Photo Frame

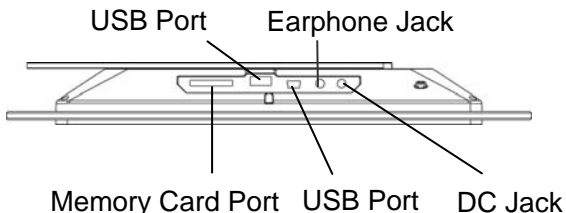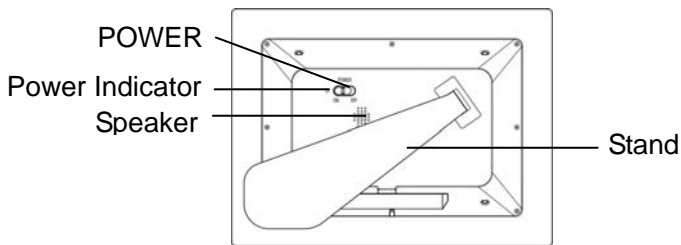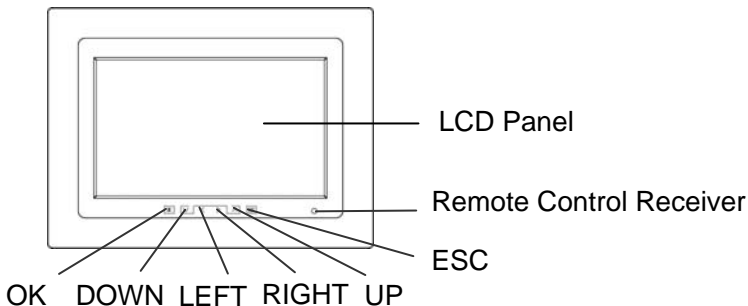

Notice: You can hang your Digital Photo Frame on the wall shown as the below picture.

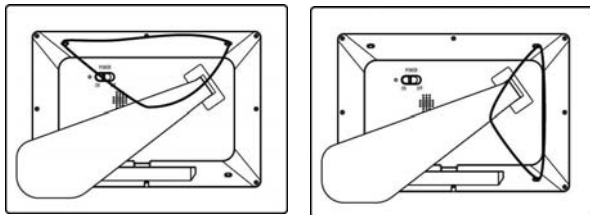


REMOTE CONTROL




For better performance, operate the remote control in an appropriate range as recommended below.

Horizontal Angle $\leq 45^\circ$
 Effective Distance: 3m

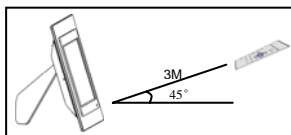

Horizontal Angle $\leq 15^\circ$
 Effective Distance: 5m

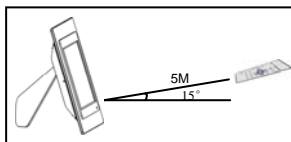


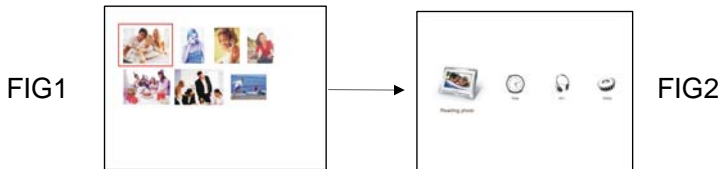
Playback Mode(Viewing JPEG/AVI Files)

Notice:

1. Internal memory is optional. JPEG/AVI files saved in the internal memory can be played in the Digital Photo Frame without a memory card.
2. The video-playing function is optional; some Digital Photo Frame models may be unable to play AVI files.


● Turning on the Digital Photo Frame

1. Connect the Digital Photo Frame to the DC 9V adapter.
2. To read files from a memory card, insert a memory card into the Digital Photo Frame Memory Card Port first. If the Digital Photo Frame is equipped with internal memory, then it is not necessary to insert a memory card.
3. Press the “Power” button on the Digital Photo Frame to activate it.
4. The Digital Photo Frame will automatically recognize image or video files saved in a memory card or in internal memory, and it will display all image or video thumbnails.
 - 5.1 To start viewing images or playing video clips, see the below section “Viewing Images” or “Playing Video Clips.”
 - 5.2 To return to the main menu, press the “ESC” button or the “Menu” button on the remote control as shown in FIG2. To enter the thumbnail mode again, press the “UP”, “DOWN”, “LEFT” or “RIGHT” button(the navigation buttons on the remote control) to select the playback icon  in the main menu and then press the “OK” button.



● Viewing Images

1. After entering the thumbnail mode, press the “UP”, “DOWN”, “LEFT” or “RIGHT” button(the navigation buttons on the remote control) to select the thumbnail to view. Press the “OK” button to enlarge the image.

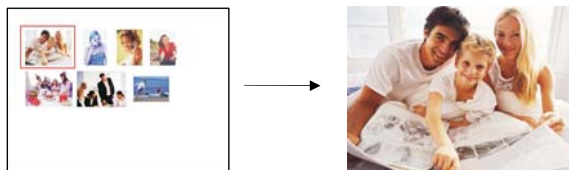

2. To view the previous image, press “UP” when an image is enlarged. Press “DOWN” to view the next one.
3. Slideshow:
 - 3.1.1 When in the thumbnail mode, press the “Slide” button on the remote control,
 - 3.1.2 When an image is enlarged, press either the “Slide” button on the remote control or the “OK” button to enter the slideshow mode.
- 3.2 Stop viewing the slideshow:

Press “OK” to stop at the current full-sized image. To return to the thumbnail mode, press “ESC” or the “Preview” button on the remote control.
4. Photo Rotation & Display Ratio:
 - 4.1 When the display ratio is set to 4:3, an enlarged image can


be rotated by pressing “RIGHT,” “LEFT,” or the “Rotate” button on the remote control. Press “RIGHT” to rotate the current image clockwise rotate; press “LEFT” to rotate anti-clockwise.

4.2 To change the display ratio, press the “Ratio” button on the remote control when in the playback mode. Or set the ratio in the setup mode. See “Setup Mode” section.

5. Press the “ESC” button to return to the previous mode or press the “Menu” button on the remote control to return to the main menu,

● Playing Video Clips


1. After entering the thumbnail mode, press “UP”, “DOWN”, “LEFT” or “RIGHT”(the navigation buttons on the remote control) to select the thumbnail to play.
2. Press “OK” to start playing a video clip.

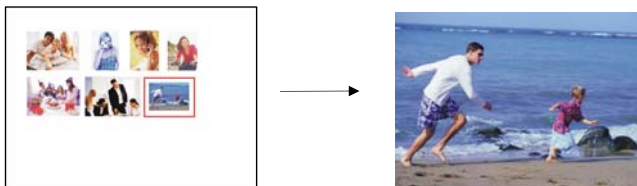


3. Press “OK” again to pause. To continue playing, press “OK.”
4. Press “ESC” once to return to the thumbnail mode. Press “ESC” again to return to the main menu.

NOTICE: The Digital Photo Frame only supports Motion JPEG format videos.

Time Mode


1. Press “UP”, “DOWN”, “LEFT” or “RIGHT” to select the icon  in


the main menu and then press “OK” to enter the Time Mode.

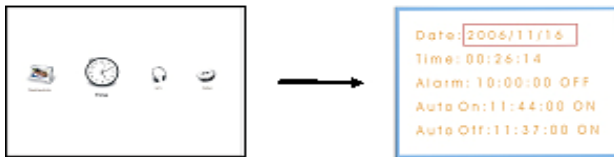

2. Press “UP” or “DOWN” to select items; press “OK” to confirm; Press “UP” or “DOWN” to change settings.
3. Press “ESC” to save the settings and exit.
(See the “Show Time” and the “Show Calendar” sections in the “Setup Mode.”)


MP3 Mode


1. Press the “MP3” button on the remote control to enter the MP3 mode. Or press “UP”, “DOWN”, “LEFT” or “RIGHT” to select the icon  in the main menu and then press “OK” to enter the MP3 Mode.

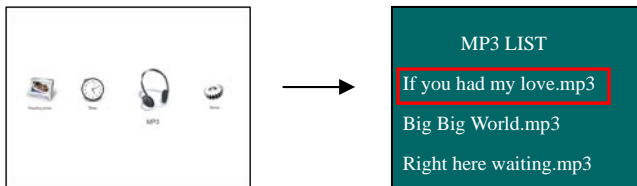

2. Press “UP”, “DOWN”, “LEFT” or “RIGHT” to select MP3 files.
3. Press “OK”(or the play button on the remote control) to play a song. Press “OK”(or the pause button on the remote control) again to pause.
4. Press “ESC” to stop and return to the main menu.

Setup Mode

1. Press “UP”, “DOWN”, “LEFT” or “RIGHT” to select the icon  in the main menu. Press “OK” to enter the setup mode.

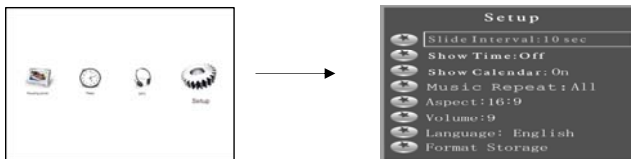

2. Press “UP”, “DOWN”, “LEFT” or “RIGHT” to select items. Press “OK” to change settings.
3. Note the following details:
 - Slide Interval
5/10/30/60 seconds
 - Show Time
ON/OFF
(When it is set to ON, the time will be displayed in the playback mode. It can also be switched to ON/OFF by pressing the “Time” button on the remote control.)
 - Show Calendar
ON/OFF
(When it is set to ON, the calendar and date that have been set in the Time Mode will be displayed in the playback mode. It can also be switched to ON/OFF by pressing the “Date” button on the remote control.)
 - Music Repeat
ALL/ONE/NONE
 - Aspect
4:3/16:9
(Set the display ratio of images. See the “Photo Rotation & Display Ratio” section in the “Playback Mode.”)
 - Volume
0~9

--Language

English/French/Spanish/German/Italian/Dutch

--Format storage

Delete all internal photos?

[ENTER] Yes

[ESC] NO

It can select Yes/NO by pressing the Enter or ESC button on the remote control.

4. To complete Setup, please press "ESC" to save the setting and exit.

Card Reader (Mass Storage Mode)

1. Connect the Digital Photo Frame to a computer with the supplied USB cable.
2. In Mass Storage mode, the Digital Photo Frame with a memory card acts exactly like a Card Reader. It can be accessed via any Windows user interface. Pictures or video clips can be copied, moved or deleted in exactly the same way PC files are manipulated. (See "USB Device Unplugging Notice" section.)

Notice:

1. In the playback mode, files saved in a memory card can be copied to internal memory by pressing the "Copy" button on the remote control. But the function will not be effective if the Digital Photo Frame does not equipped with internal memory.
2. The Digital Photo Frame does not display files saved in internal memory unless a memory card is removed. With an inserted memory card, the Digital Photo Frame will only capture files saved in a memory card.