

Copyright Information

All rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form by any means, optical, electronic, recording, or otherwise, without the written permission of our company.

We reserve the right to revise this manual and to make changes to any or all parts at any time, without obligation to notify any person or entity of such revisions and changes.

Digital Photo Frame User Guide

Table of contents

➤ Specifications	4
➤ System Requirements	5
➤ USB Device Unplugging Notice	5
➤ Getting to Know Your Digital Photo Frame	6
➤ Remote control	7
➤ Viewing JPEG/AVI files from a SD/MMC card	8
• Viewing Images	8
Displaying Images	9
Browsing Images	9
Setting an Image as the Background	9
Setting the effects	9
• Playing Video Clips	10
Setting video effects	11
➤ Setup Mode	12
➤ Calendar Mode	13
➤ Card Reader	14
➤ AV Out Mode (Optional)	14

Specifications

Screen Size:	TFT LCD Supports 16:9 and 4:3 displays
On-screen Display Language:	English, French, Spanish, German, Italian, Dutch
File formats supported:	JPEG (up to 26 Mega Pixels) Pure Motion JPEG, AVI
Expansion Slot:	SD/ MMC Card slot, up to 2GB capacity
Speaker:	Built-in Speaker (Mono)
Interface:	USB 2.0
Infrared:	IR Remote Control
Other Functions:	Slide show 7 photo effects Photo rotation Alarm Clock & Calendar SD/MMC Card Reader
Standard Accessories:	USB Cable, Adapter (100V-240V), Instruction Manual, Stand, Driver CD & Arcsoft software, Remote control
Dimension:	208 x 156 x 25 mm (W x H x D)
Weight:	410±5g
Power Source:	Input AC 100 ~ 240 V Output DC 9V, 2A /

Minimum System Requirements:

Pentium 166 MHz processor or higher

Microsoft Windows 98SE/Me/2000/XP

Available USB port

Super VGA video card and color monitor

CD-ROM or DVD-ROM drive

64 MB RAM


200MB available HD space

Mass Storage Operating System: Win98SE, Me, 2000, XP

USB Device Unplugging Notice:

To unplug the Digital Photo Frame from the computer, be sure to stop the device beforehand. To stop the Digital Photo Frame, please follow the steps below:

 
 
Removing the Digital Photo Frame from a PC: (For Windows Me/2000/XP)

1. Click on the “” device icon located on the taskbar. Select the device you want to stop (e.g. Stop USB Mass Storage Device Drive (E:)).
2. Follow on-screen instructions to safely remove the Digital Photo Frame.


Notice:

1. The Digital Photo Frame with a SD card acts exactly like a card reader (mass storage device) by connecting the Digital Photo Frame to a computer via USB. (See “Card Reader” section.)
2. Before editing photos, the AP driver and photo-editing software must be installed.


Getting to Know Your Digital Photo Frame

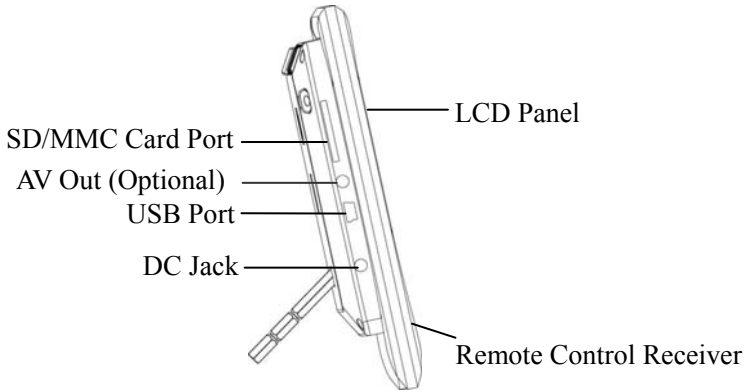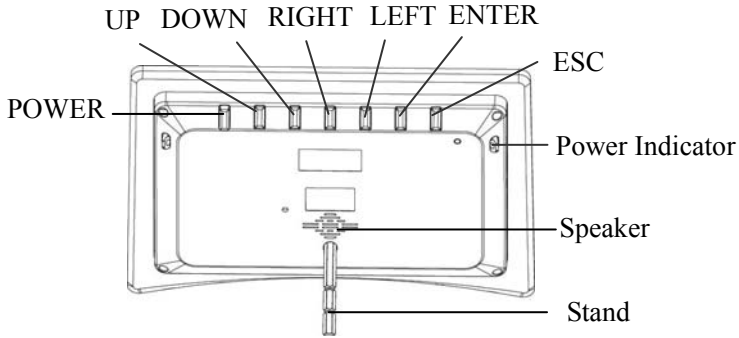

 Notice: You can hang your Digital Photo Frame on the wall shown as the below picture.

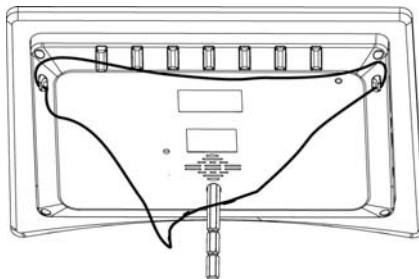


REMOTE CONTROL

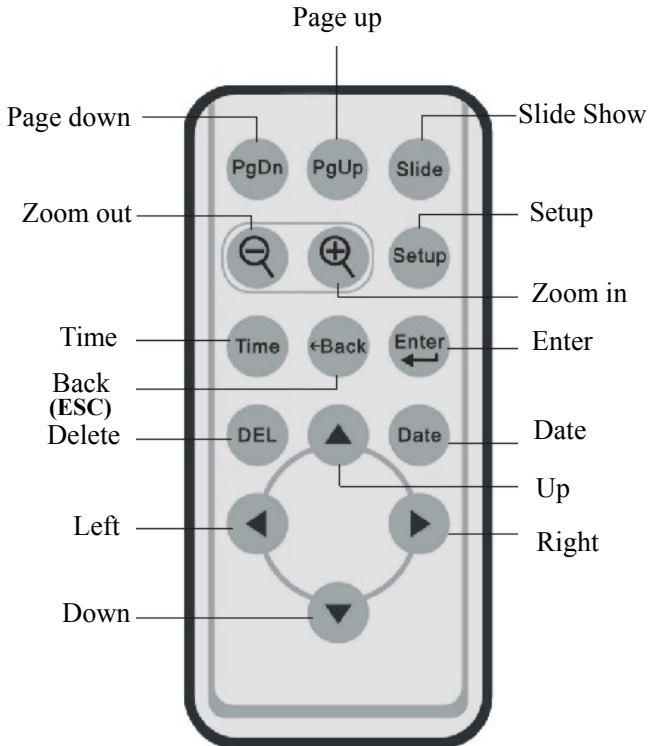 


For better performance, operate the IR remote in an appropriate range as recommended below.

 Horizontal Angle $\leq 45^\circ$
Effective Distance: 3m

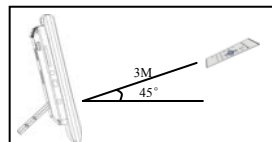

 Horizontal Angle $\leq 15^\circ$
Effective Distance: 6m

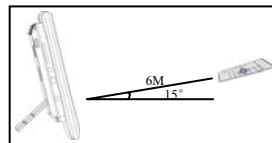

Viewing JPEG/AVI files from a SD/MMC card

Notice: The video-playing function is optional; some Digital Photo Frame models may be unable to play AVI files.

1. Connect the Digital Photo Frame to the DC 9V adapter.
2. Insert the SD/MMC card into the Digital Photo Frame SD/MMC Card Port. Turn on the Digital Photo Frame.
3. The Digital Photo Frame will automatically recognize the SD/MMC card and display all image thumbnails as below.




See the following section 4.1 to display images.


To return to the main menu, press the “ESC” button on the Digital Frame (or the “Back” button on the remote control) as shown below.



• Viewing Images

1. To view still images, enter the playback mode first and then enter the image thumbnail mode. (The Digital Photo Frame will automatically enter the image thumbnail mode right after it is turned on. Skip to section 4.1 “Displaying Images.”)
2. To enter the playback mode, press “UP” or “DOWN” to select

the icon  in the main menu and then press the “ENTER” button.

3. Select the image-viewing icon  by pressing “LEFT” or “RIGHT” after entering the playing mode. Press “ENTER” to enter the image thumbnail mode as shown below.



4.1 Displaying images:

Use the navigation buttons to select a thumbnail to display. Press the “ENTER” button and the image thumbnail will be enlarged.

4.2 Browsing images:

When an image is enlarged, press “LEFT” or “RIGHT” to view the next image.


4.3 Setting an image as the background:


When an image is enlarged, press "DOWN" to set the current picture as the background.


4.4 Setting the effects


When an image is enlarged, press “ENTER” to set picture effects as shown below.




 : Rotate

 : Zoom in/Zoom out

 : Slideshow



 : Delete

 
 : Setup

4.4.1 Press “LEFT” or “RIGHT” to choose different effects.

4.4.2 Press “ENTER” to confirm or “ESC” to exit. (The “ESC” button on the Digital Frame equals to the “Back” button on the remote control.)

• Playing Video Clips

1. To play video clips, enter the playback mode first and then enter the video thumbnail mode.
2. To enter the playback mode, press “UP” or “DOWN” to select the playback icon  in the main menu and then press the “ENTER” button.
3. Select the video-playing icon  by pressing “LEFT” or “RIGHT” after entering the playback mode. Press “ENTER” to enter the video thumbnail mode as shown below.

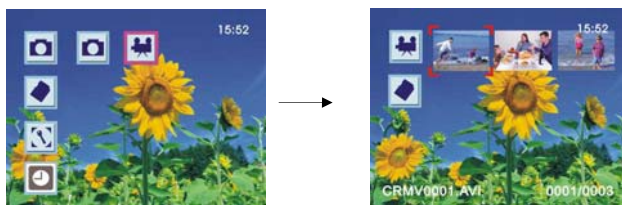


4. Use the navigation buttons to select the video clips, and then press “ENTER” to start playing.

5. Press the “ESC” button on the Digital Photo Frame (or the “Back” button on the remote control) to stop video playing.

5.1 Setting video effects


When a video clip stops playing, press “ENTER” to set video effects, as shown below.



 : Play

 : Slideshow

 : Delete

 : Setup

5.1.1 Press “LEFT” or “RIGHT” to choose different effects.

5.1.2 Press “ENTER” to confirm or “ESC” to exit.

NOTICE: The Digital Photo Frame only supports Motion JPEG format videos.

Setup Mode

1. Press “UP” or “DOWN” in the main menu to enter the Setup Mode.

 


2. Press “UP” or “DOWN” to select items. Press “LEFT” or “RIGHT” to change settings. Press “ESC” to exit Setup.
3. Note the following details:

--Time Setting

Time/Alarm

(Press “LEFT” or “RIGHT” to select Time or Alarm mode. Set the date and time in Time mode. Set the Alarm to ON and then set the time in Alarm mode. The Digital Photo Frame will beep at the appointed time.)

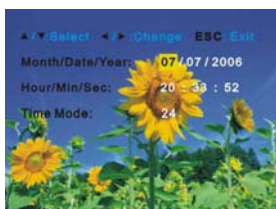

Date and Time Setting



Alarm clock Setting

--Language Setting

English/French/Spanish/German/Italian/Dutch

--Slide Duration

From 3 seconds to 60 seconds

--File Description

ON/OFF

(File name and information will show on displayed images if

the File Description is set to ON.)

--Folder Mode

YES/NO

(If it is set to YES, the Digital Photo Frame will display only the thumbnails of the first layer file in thumbnail mode. If it set to NO, all thumbnails will be displayed.)

--Aspect Ratio

 
16:9/4:3

(Set the ratio of displayed images.)

- To complete Setup, press "ESC" to exit. A prompt will show: "Save Setting?" Press "ENTER" for YES or "ESC" for NO.

Calendar Mode

- Press "UP" or "DOWN" to enter the Calendar Mode.

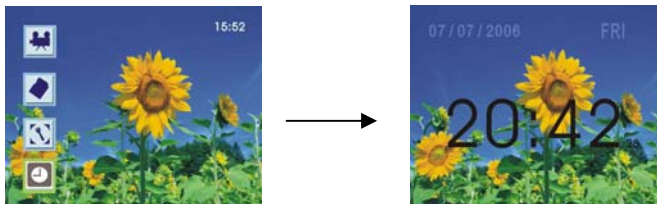

- The date and time that have been set will be displayed.
- Press "ENTER" to enter the calendar as below.



- The date will be displayed. To view the previous month or the following month, press "LEFT" or "RIGHT," respectively.

5. Press “ENTER” to confirm or “ESC” to exit.

Notice: If the Digital Photo Frame is left inactive for 1 minute, it will automatically enter the Calendar Mode, as shown below.



Card Reader (Mass Storage Mode)

1. Connect the Digital Photo Frame to a computer with the supplied USB cable.



2. In Mass Storage mode, the Digital Photo Frame with a SD card acts exactly like a Card Reader. It can be accessed via any Windows user interface. Pictures or video clips can be copied, moved or deleted in exactly the same way PC files are manipulated. (See “USB Device Unplugging Notice” section.)

AV Out Mode (Optional)

1. Connect the Digital Photo Frame to a TV with the supplied AV cable.
2. JPEG/AVI files in a SD card can be viewed on the TV screen. (Select NTSC or PAL according to the preferred location setting. Set PAL for China, U.K., Germany, Russia, and Africa; NTSC for North America and Japan)